


**REFERENCE MICROPHONE CABLE
RMC305**

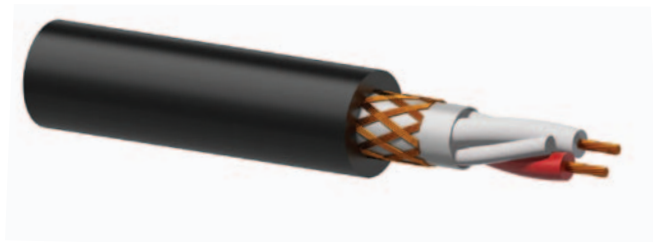

Analog Audio Signal

Microphone Cable

OUTER DIAMETER

Ø 6 mm

APPLICATIONS

Balanced signal cable for stage, studio, fixed installation. excellent screening against interferences

INNER CONDUCTOR



SHIELDING



The RMC305 is a high quality microphone cable for indoor and outdoor use. It's suitable for mobile and fixed applications. The cable has a highly flexible jacket made of PVC and is easy to handle.

Two insulated and twisted conductors of 0.23 mm² are provided inside the cable. The durable shielding gives an excellent protection against interference of all kinds, such as electromagnetic fields caused by dimmers, motors or power cables.

The RMC305 is an "all-round" microphone cable with an outer diameter of 6 mm and is suited for all kinds of applications where reliable signal transmission is required.

Type of cable	Balanced microphone cable
Inner conductor	2 x BC 20 x 0,12 mm
Inner conductor section	0,23 mm ²
Isolation	Foamed PE Ø 1,6 mm
Isolation colour	Red / White
Number of conductors	2
Conductor twisting	Yes
Shielding	BC 16 x 4 x 0,12 mm - Braiding
Filling	Cotton yarn
Separator	Cotton paper
Outer jacket	Flexible PVC
Outer jacket colour	Black
Outer jacket dimensions	Ø 6 mm
American Wire Gauge	24 AWG


MECHANICAL SPECIFICATIONS

Temperature range	fixed installation	-40° C till +80° C
	flexible installation	-25° C till +70° C
Bending radius	fixed installation	6 x outer diameter
	flexible installation	8 x outer diameter

Comparable to: MC305 (p. 12)



Available Lengths:
100 m plastic reel

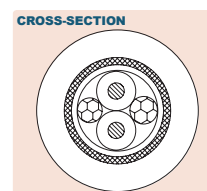

Audio



BULK CABLES

